

Hunter 107

PROJECTOR



1. Locate the **PROJECTOR CONTROLLER** on the desk.
2. Press the **ON** button to power on the projector.
3. Press the **INPUT** button to switch inputs:
 Computer: PC laptop
 Video: DVD/VCR

SOUND



1. Switch **ON** the **PYLE PRO** pre-amp/amp next to the room computer.
2. Turn the **SOURCE** knob to switch inputs:
 PC: PC laptop
 VCR: DVD/VCR
3. Adjust the output volume with the **VOLUME** knob.

DVD/VHS



1. Insert the DVD/VHS tape into the player located in the back of the classroom.
2. Change the **SOURCE** button on the player to DVD or VHS, depending on which you intend to use.
3. Press **PLAY**.

Make sure to change the projector source to "VIDEO" and the pre-amp source to "VCR."